
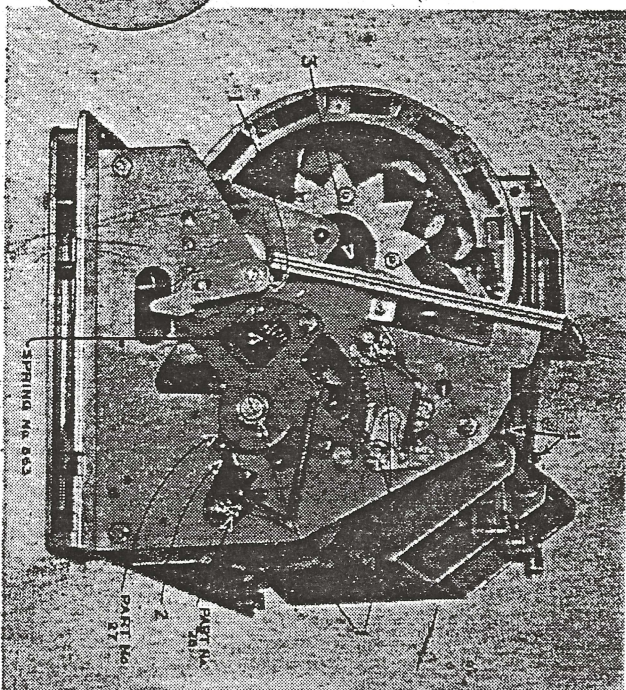
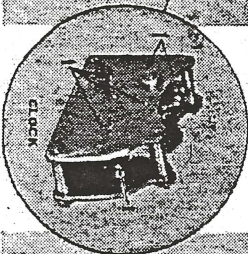


Paper panel from the inside back door of Bally RELIANCE "4-Pay" concentrates on keeping machine in working order, and stays away from any mention of the dice positioning. Note no reference to manufacturer or marketer, specifically Bally.

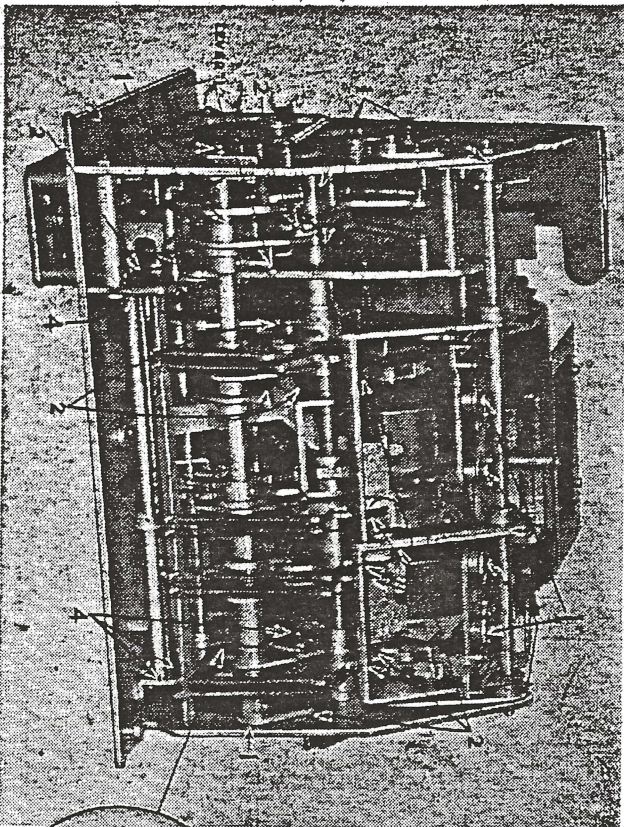

IMPORTANT INSTRUCTIONS

To remove machine first lift top cover up and take off, then hold up lock levers located under base of machine at each side and pull out.

IMPORTANT

All shafts, bearings and moving parts of the machine should be kept well oiled or greased. The more important parts that require frequent oiling and greasing are clearly indicated in the diagrams above. Parts marked "1"—OIL REGULARLY, parts marked "2"—CUP GREASE REGULARLY and parts marked "3"—OIL OCCASIONALLY. Keep bearings of the four bottom shafts marked "4"—WELL OILED. To insure easy running, quietness and long life these instructions must be followed.

Keep the clock gears and bearings well oiled at all times. The five bearings on each side of the clock, as well as the gears must be oiled frequently.

The reel bearings (marked 3 in diagram) should only be oiled at long intervals. Their bearings are oiled thoroughly at the factory and because of their construction retain oil for a long period of time.

Care must be taken not to use too much oil in places where it may splatter on the reels and dirty the dice.

Source: John Finkler

Do not oil the payout slides. The slides are made of stainless steel and brass to prevent rust and oil will tend to make them stick.

The coin chutes are self cleaning but nevertheless should be wiped and blown out occasionally. After jackpot tokens are won they should be replaced in the chute at the front of the machine as soon as convenient. These tokens are all serially numbered and their numbers should be noted down so no counterfeiters can be used.

To clean the front cover use only pure soap and water. Dry thoroughly and rub the polished surfaces well to insure a bright and attractive machine.

Be careful when putting in the cash box to have the handle of the box at the back. Putting the cash box in backwards will eventually clog up the machine because coins have no place to drop.

The dice may be cleaned with soap and water if ever necessary but extreme care must be used to replace them in their original position in the reels.

The lever L (marked with red paint in the machine) should be in the down position when coins are to be played. When it is desired to play Checks shift the lever to the upper position. It is well to go over the machine occasionally and check all screws to see that none have worked loose.